

Touch LCD Monitor

# TM Series



# User Manual


# Index of Contents

<b>1. Control Panel .....</b>	<b>3</b>
1.1 Push Button .....	3
1.2 LED Indicator .....	3
<b>2. I/O Connector .....</b>	<b>3</b>
<b>3. OSD Function .....</b>	<b>4</b>
3.1 Brightness.....	4
3.2 Contrast .....	4
3.3 Display .....	4
3.4 Color .....	5
3.5 Clock/Phase .....	5
3.6 Management.....	6
<b>4. Cleaning and Safety .....</b>	<b>7</b>
4.1 Cleaning Touch LCD Monitor .....	7
4.2 Screen .....	7
4.3 Case .....	7
4.4 Safety .....	7

## Attention

1. This manual contains important information for the proper setup and maintenance of the products. Before setup and using of the products, please read through this manual clearly.
2. This specification shall apply only to the product(s) coming along with this manual inside.
3. The specification may be modified without any notice in advance. Please inquire your supplier for latest specification, driver, or manual.

## 1. Control Panel

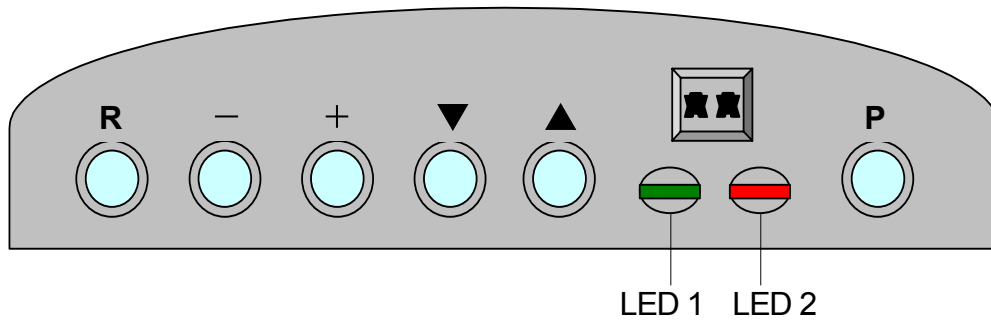


### 1.1 Push Button

Push Button	Description of Function
P	Power On/Off
▲	Auto Setting
▼	Selection of Menu
+ -	Change and Selection for Detail of Each Setting
R	System Reset (This function is only available for this monitor embedded on IT-1000.)

### 1.2 LED Indicator

LED Signal	Description of Function
LED 1 in Green	There is VGA signal to monitor.
LED 2 in Red	There is no VGA signal to monitor.

## 2. I/O Connector

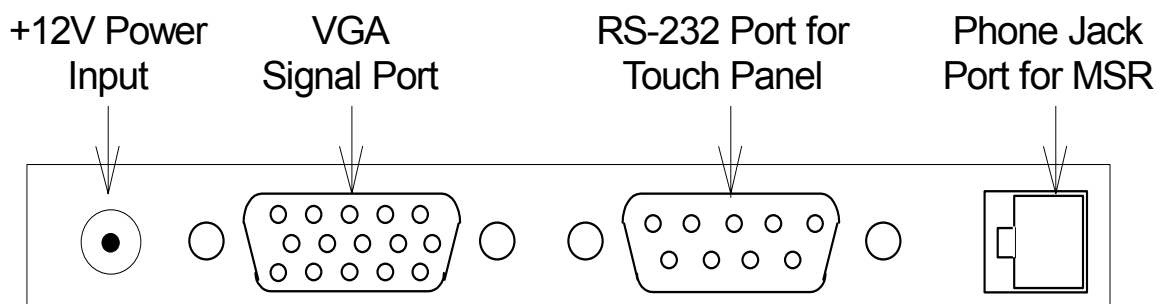

### 3. OSD Function

#### 3.1 Brightness

To adjust brightness of LCD screen




#### 3.2 Contrast

To adjust contrast of LCD screen



#### 3.3 Display

To adjust horizontal and vertical position of display

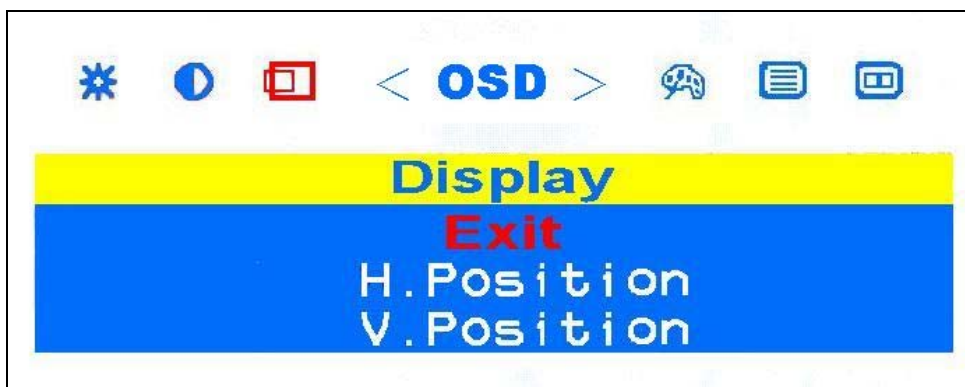

### 3.4 Color

To adjust “RGB Adjust” about color.



- ※ RGB Adjust
  - Red Corrected
  - Green Corrected
  - Blue Corrected

### 3.5 Clock/Phase

To adjust clock and phase



## 3.6 Management

To adjust “OSD Display”, “Sharpness”, “Language”, and “Recall Factory Setting” about LCD and OSD function.



- ※ OSD Display
  - Horizontal Position of OSD Display
  - Vertical Position of OSD Display
- ※ Sharpness
  - Smart Sharpness
  - High
  - Medium
  - Low
- ※ Language
  - English
  - French
  - German
  - Italian
  - Español

## **4. Cleaning and Safety**

### **4.1 Cleaning Touch LCD Monitor**

Before cleaning, please power off the computer system and disconnect the monitor from the AC outlet to prevent the damage. After finishing of cleaning, please make sure the monitor is completely dry before you reconnect the cables and power it on. Do not use any liquid or spray cleaners directly on surface of screen or cabinet. Please use a soft, clean, lint-free cloth with cleaners to clear your monitor.

### **4.2 Screen**

Please use a soft, clean, lint-free cloth to remove the dust and dirt from your monitor. For the fingerprints and smudges, please use a soft cloth with cleaners to clean them.

### **4.3 Case**

Please clean the cabinet of monitor with a soft cloth slightly moistened with a mild detergent solution. Please rinse the cloth with clear water, wring it dry, and wipe the cabinet to remove any detergent residue.

### **4.4 Safety**

- (1) To reduce risk of electric shock, please follow all safety notices, never open the case of monitor by yourself, and turn off the power before cleaning.
- (2) The monitor is equipped with a 3-wire, grounding power cord. The power cord plug only fit into a three-prong safety ground outlet. Do not attempt to fit the plug into an outlet that has not been configured for this purpose. Do not use a damaged power cord. Please use the only power cord that comes with your monitor. Using an unauthorized power cord may invalidate the warranty of the products.
- (3) Please do not insert or block anything inside the four internal edges of the screen.
- (4) Please remain dry for monitor when you use. Please do not pour liquid into or onto monitor. If your monitor becomes wet, please do not attempt to repair by yourself and please ask a qualified service technician to check it before you turn on the power.

## **Care and handling of your touch monitor**

The following tips will help you keep your touch monitor functioning at the optimal situation:



Please protect your touch monitor away from extremely high or low temperatures.



Please keep your touch monitor dry and away from humid environment.



Please do not wash with a wet cloth or pour fluid on it.



Under the condensation for your touch monitor, please do not power on until the condensation is evaporated completely.



Please keep your touch monitor away from bumps and drops.



Please keep your touch monitor away from dust, sand, and dirt.